



Warning: Choking Hazard
Assembly hardware contains small parts. **Adult assembly required.**




Warning: No Climbing Units are not intended for children to climb on and it is recommended that units **over 32 inches tall** be **attached to a wall** to **prevent tipping.**

Assembly Instructions for: Big Book Displays - R0044DE

Instructions: Unbox unit and find hardware bag inside of box.

- 1 - Take out shelves from bottom of unit.
- 2 - If shelf clips are not in the shelf support holes place them where you wish them to be. See drawing.
- 3 - Tilt shelf at a slight angle and place one side on the shelf supports and then push down on other side to set shelf into place.
- 4 - Repeat for all other shelves.

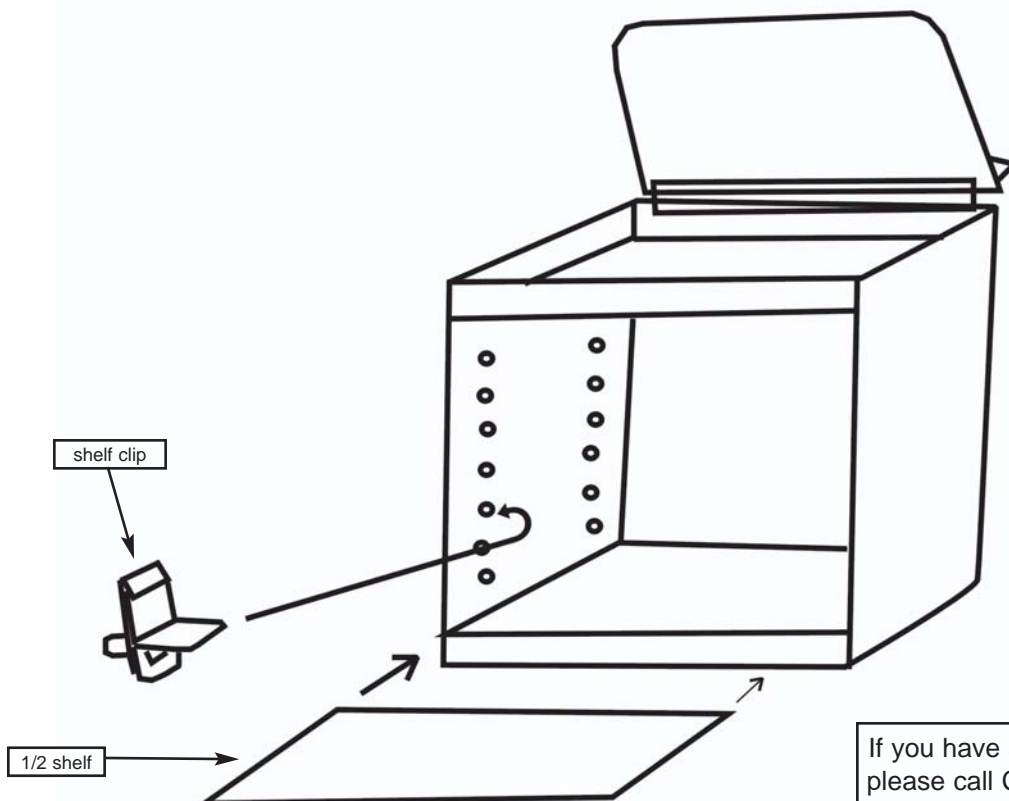

If you have any difficulties assembling this product, please call Childs Play Customer relations at (800) 447-8375 or email us at mail@childsplay1.com
Childs Play 131 Yorktown, Dallas, Tx. 75208
www.chidsplay1.com